

## Instructions



# Rampless.net

LEVINREY PTY LTD  
T/A RAMPLESS.NET  
10 RETIMO CLOSE  
ST IVES CHASE  
NSW 2075  
ABN 14106309077



+61 405 353 621

9 August 2018

ref SR 9G8

### Service request - Lazy-Lowder Spare wheel bracket replacement bolts

Tools required : 2x 13mm hex spanners or similar

1. Remove only 1 nut and bolt.
2. Replace with stainless steel bolt supplied.  
(Original washers can be used )
3. Tighten
4. Repeat for second nut and bolt
5. Rock the spare wheel to and fro. There must be no freeplay.

Both bolts should be tight enough so that at least 3 threads are showing beyond the nut.

